



DIGI SWAP®

Save the film camera

Application description

This product is patented in Japan and is filed for the Patent Cooperation Treaty (PCT)



1950vintage.com



DIGI SWAP®
Save the film camera

Breakthrough adapter and applications for film cameras

This gadget and application is JP patent /(PCT)patent pending.

FIREWORKS LTD
1950
Vintage

1950vintage.com

copyright © 2021 FIREWORKS K.K. all rights reserved



DIGI SWAP[®]
Save the film camera

Application description

- 1. This application works like a camera film.**
- 2. This application fulfills its function by attaching it to a dedicated adapter.**
- 3. This application is for iPhone iPhoneX, XS, XS max, XR, SE (2nd,3rd generation), 11, 11 pro, 11 pro max, 12, 12 mini, 12 pro, 12 pro max, 13, 13 mini, 13 pro, 13 pro max, 14, 14plus, 14pro, 14proMAX, 15, 15plus, 15pro, 15proMAX only.**

FIREWORKS LTD
1950
Vintage

1950vintage.com




DIGI SWAP[®]

Save the film camera

FIREWORKS LTD
1950
Vintage
1950vintage.com



initial screen

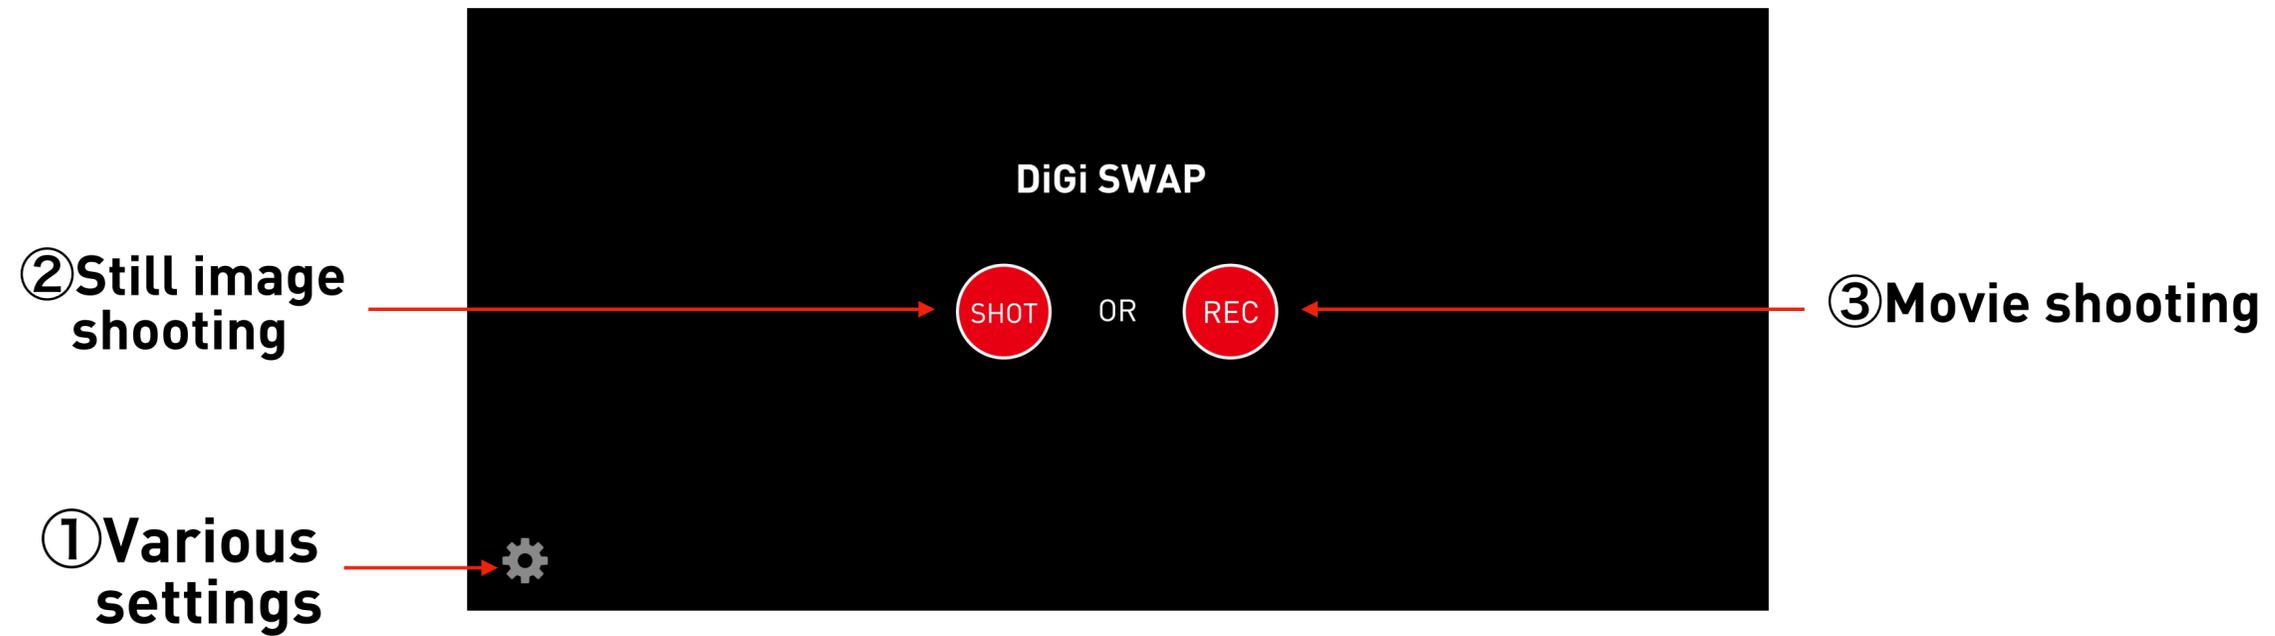




DIGI SWAP[®]
Save the film camera



① **First, adjust the focus. *13, 13mini 14, 14plus, 15, 15plus is not required.**

Make sure that the smartphone is installed in the dedicated gadget.
Press the  on the various setting screens.

various settings

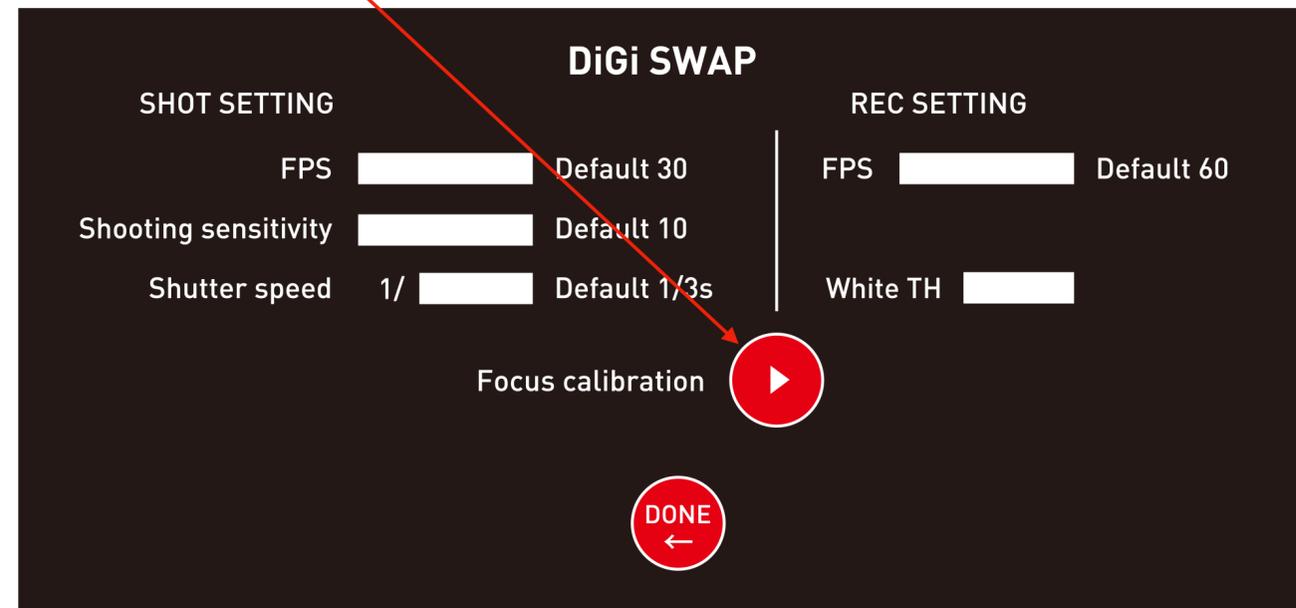



DIGI SWAP®
Save the film camera

FIREWORKS LTD
1950
Vintage
1950vintage.com

① First, adjust the focus.

Focus the film camera and set the shutter to B.
Hold down the shutter and press the focus calibration start button.

Focus calibration





DIGI SWAP[®]


Save the film camera



① First, adjust the focus.

When the completion screen is displayed, the process is complete.
If an error message is displayed, return to the various setting screens,
return to the setting screen, and make adjustments again.

Focus calibration

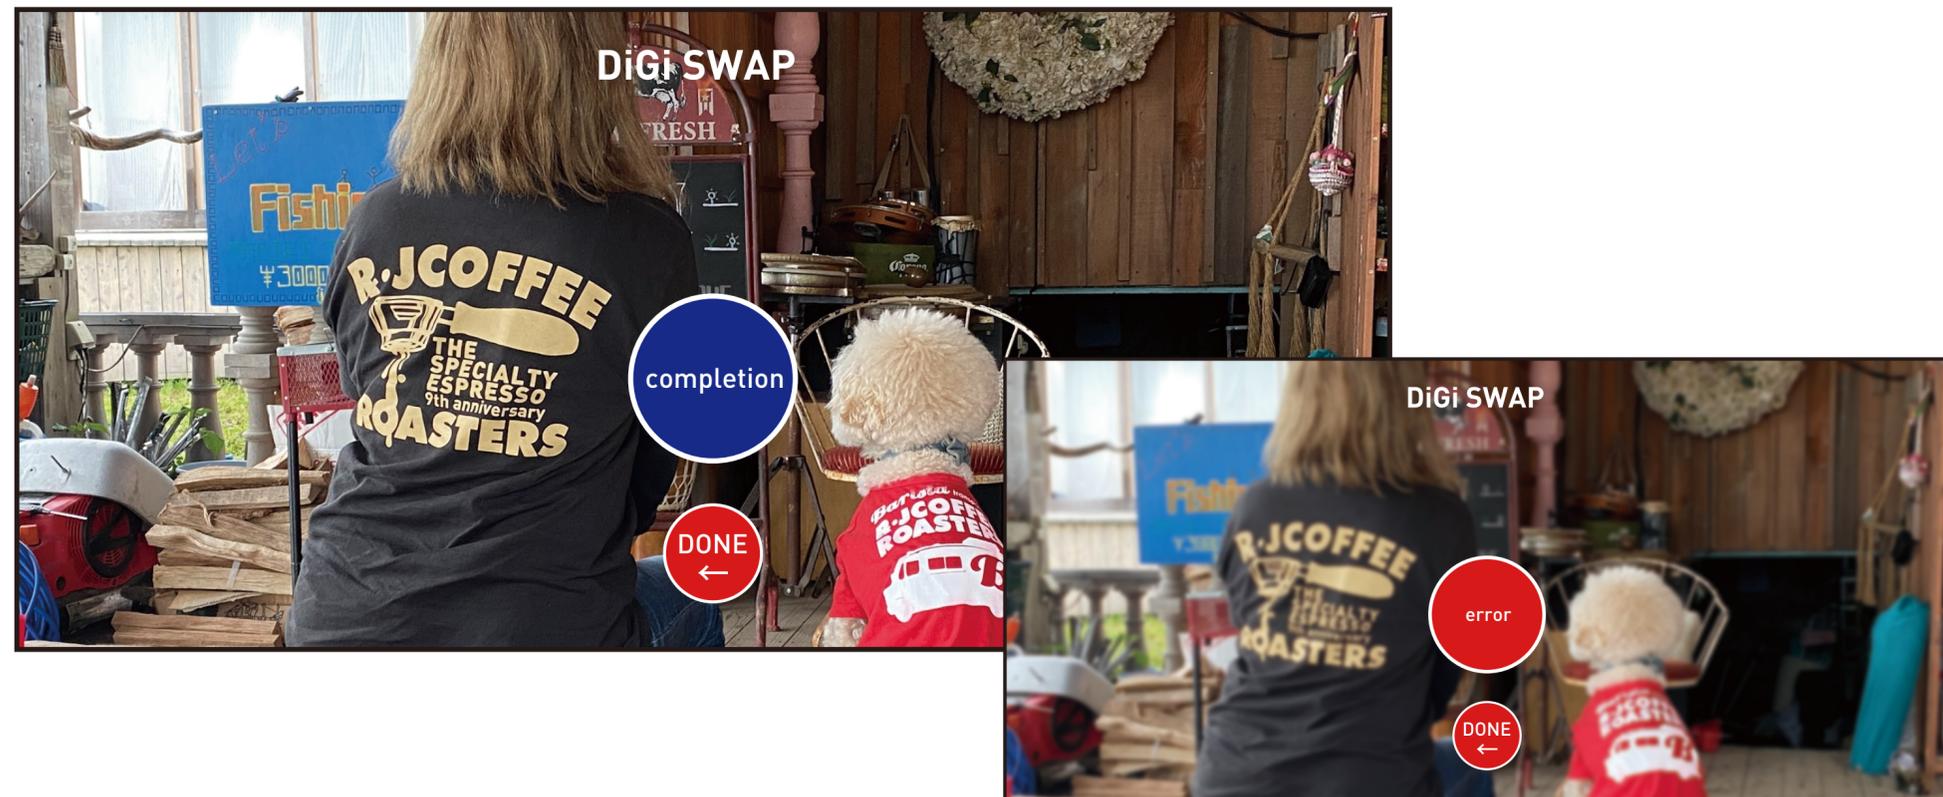

error message



DIGI SWAP[®]

Save the film camera




② How to shoot a still image.

This application acts as a film.
The focus, shutter speed, and aperture are set on the film camera side.
Sensitivity settings can be set in the app at the time of shooting.

initial screen

② Still image shooting

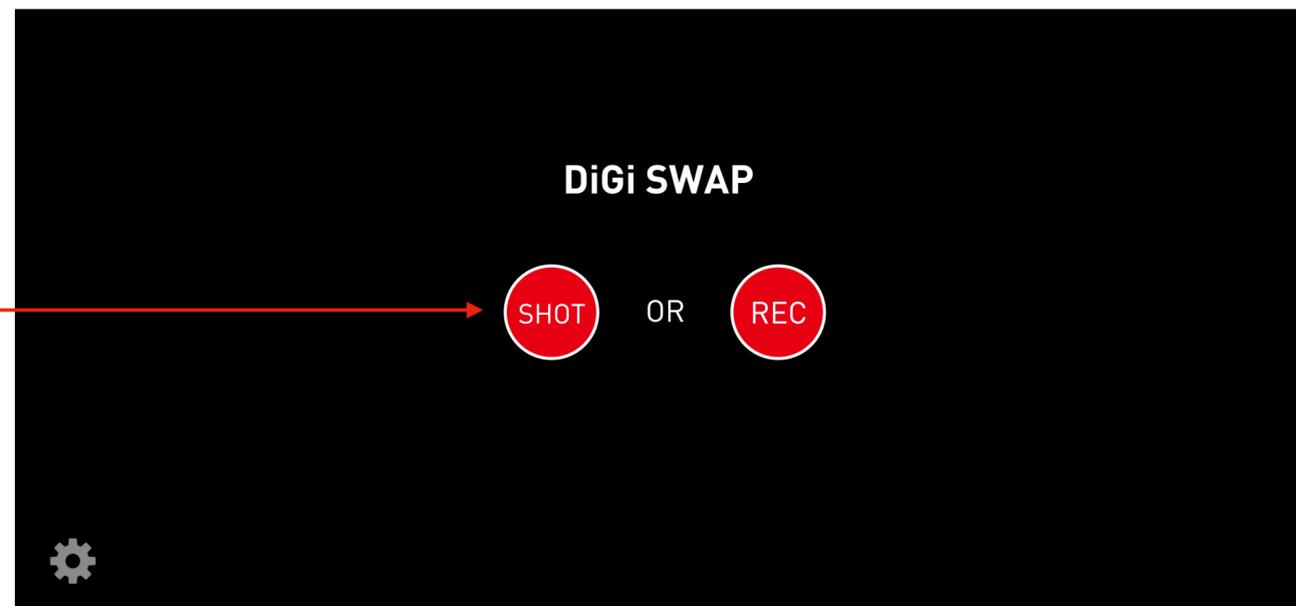



DIGI SWAP[®]

Save the film camera



② How to shoot a still image.

- ① Press the SHOT button and wait for shooting.
- ② Set the sensitivity in the app.
- ③ Adjust the focus, aperture, and shutter speed of the film camera, wind it up, and press the shutter.
- ④ Save the captured image to the iPhone photo.

The saved image can be enlarged and previewed by moving it to the bottom right of the screen and tapping it.

- ⑤ It is possible to shoot in color and black and white. Use the button on the lower right to switch between the





DIGI SWAP[®]


Save the film camera



② How to shoot a still image.

When 36 shots are taken, "Film Empty" is displayed.
If you want to continue shooting, tap "Film replacement" to start shooting.

It's playful, incorporating elements of traditional film cameras.

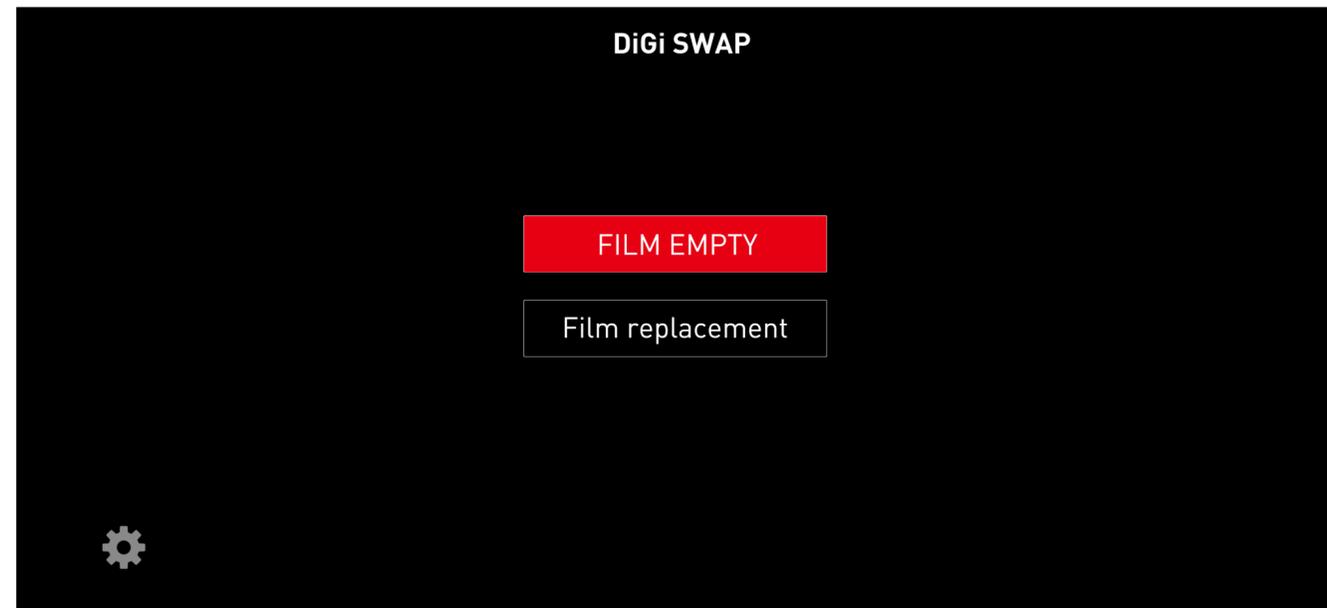



DIGI SWAP®
Save the film camera



③ How to take a video


This application acts as a cinema film.

Focus and aperture are set on the film camera side.

On the application side, you can set the sensitivity and FPS when shooting.

* Please set FPS on various setting screens

initial screen

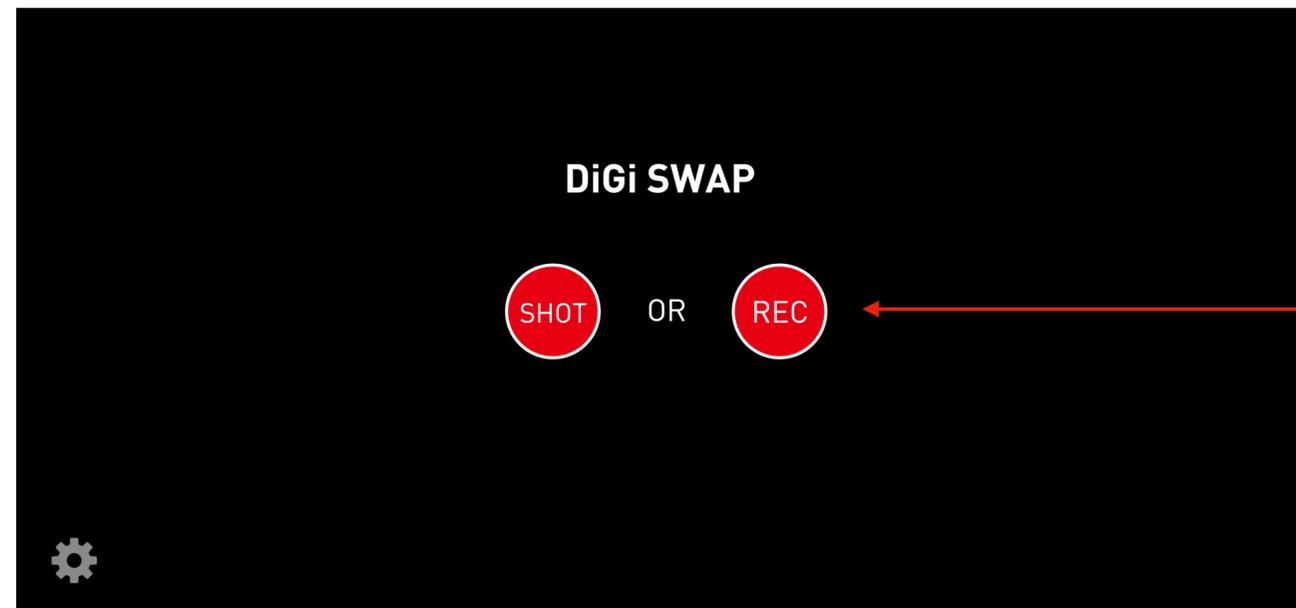

③ Movie shooting



DIGI SWAP[®]

Save the film camera



③ How to take a video

- ① Press the REC button and wait for shooting.
- ② Set the sensitivity in the application. (AUTO is recommended.)
- ③ Set the focus, aperture, and shutter speed of the film camera to (B), wind up the shutter, and then press the shutter button.

* Hold down the shutter button while shooting, and release the shutter button to end movie shooting.

- ④ The recorded video is saved on your iPhone.

* The  mark flashes during movie recording. If it does not blink, please review the settings on the setting screen.





DIGI SWAP®
Save the film camera



④ Various settings

The basic settings are fine with the default values, but if you are having trouble shooting, change the settings below. On the left are the still image settings, and on the right are the movie settings.

various settings


still image setting

FPS : Can be set from 2 to 60 depending on the model. When set to 2, the camera will work with shutter speeds of 1/2 or faster. If you always shoot at 1/30 or faster, set it to 30.

Shooting sensibility : This is the sensitivity setting for shooting. When shooting in very dark places, lowering the value may make shooting possible.

When shooting in a very bright place, the shutter may be released by itself. In this case, try increasing the value. (This setting is the same for video as well.)

Shutter speed: In combination with FPS, if you use a lot of slow shutter speeds, it is recommended to set this to 1/1.

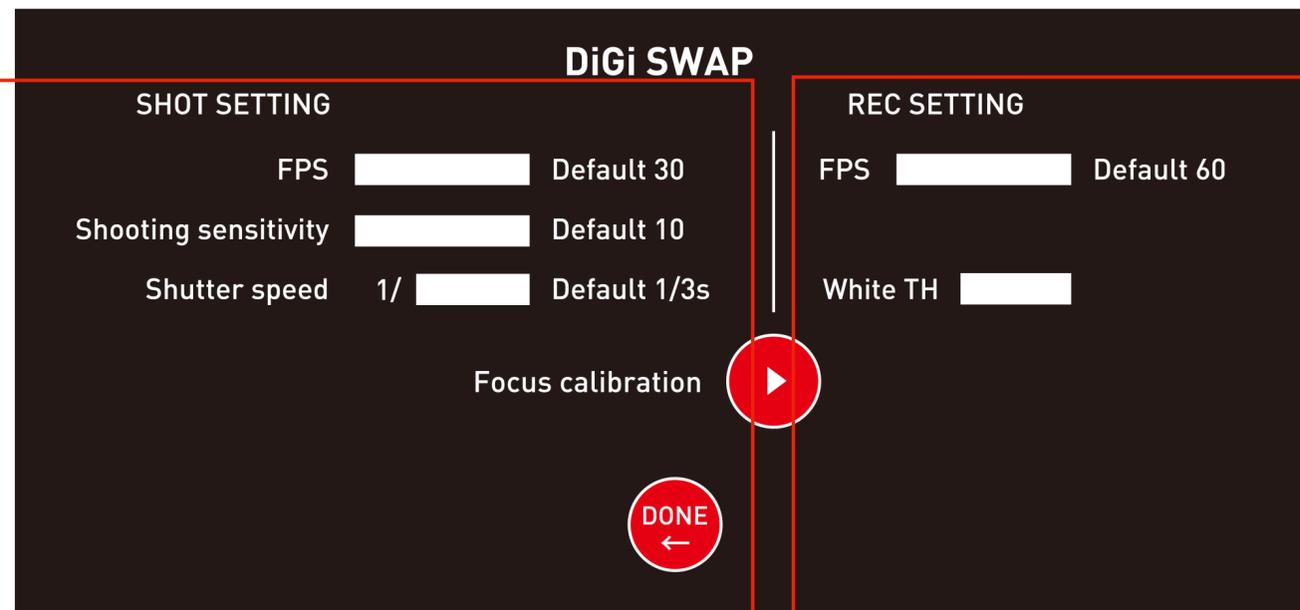

video setting

FPS: This is the frame rate for video recording. It can be set from 2 to 60 depending on the iPhone model. If the video is getting choppy, please set it to 30. When set low, you can shoot a frame-by-frame video.

White TH: If the contrast of the subject is low and you are having trouble recording video, lower the setting to about 2. The default setting is 5. *The default setting is 5. The settings range from 1 to 9.

新しいHOME 画面 New HOME screen



- ・新機能ボタン：アプリのシャッターを使用することにより、より高画質（静止画1200万画素）に、撮影画像を確認しながら撮影が可能となりました。動画は、4K,HDの切り替え、FPSは任意で設定可能。音声の記録も可能となりました。

New function button: By using the application's shutter, higher image quality (12 megapixels for still images) can be achieved while checking the captured image.

Video can be switched between 4K and HD, and the FPS can be set as desired. Sound recording is also available.




- ・新機能ボタンを押すと、「カメラのシャッタースピードをバルブしてください」というインフォメーションが表示され、OKを押すと、静止画撮影モードになります。

Pressing the New Function button displays the information "Please set the camera's shutter speed to Bulb". Press OK to enter the still image shooting mode.

新機能 New feature

新機能：静止画撮影画面 New: Still Image Shooting Screen

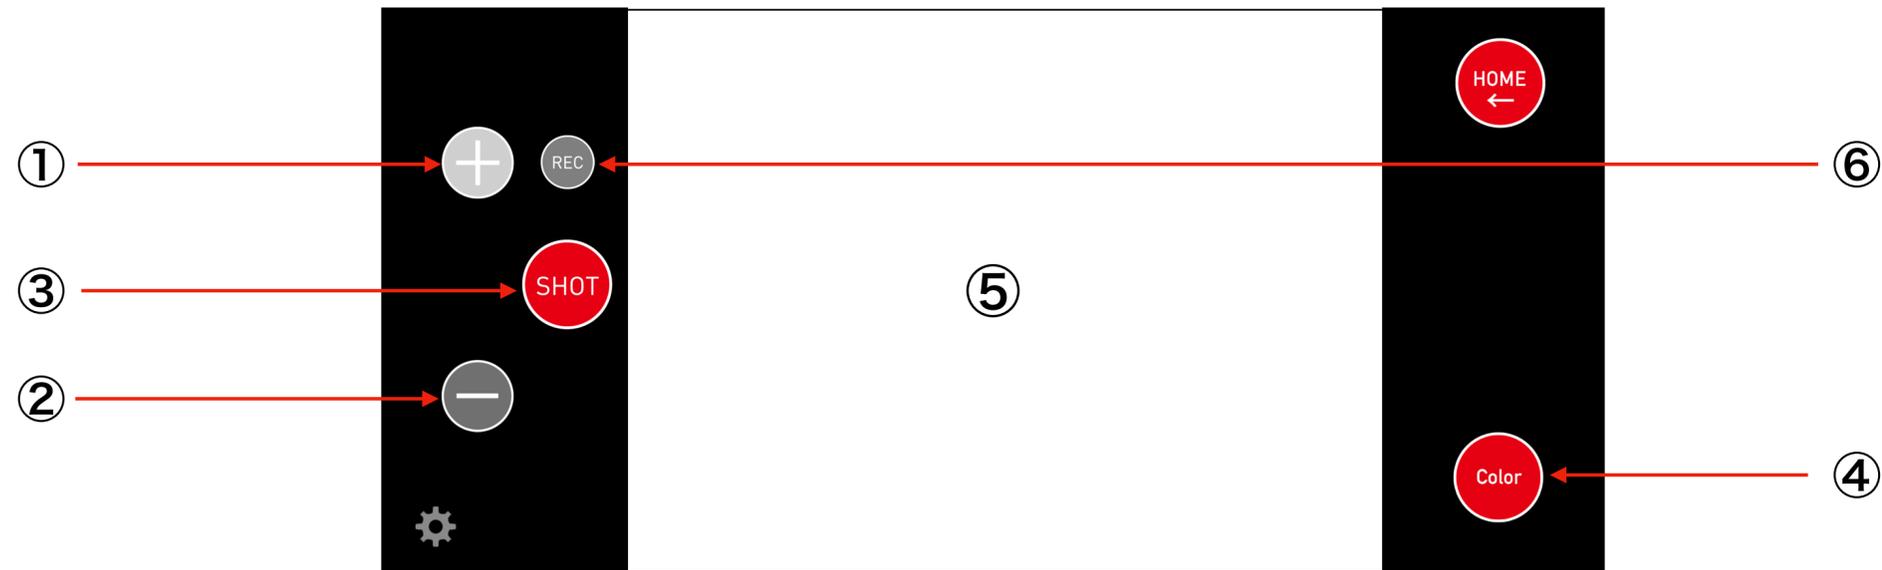


- ①感度変更ボタン+ 感度をプラスに変更可能です。初期設定はAutoです。
 - ②感度変更ボタン- 感度をマイナスに変更可能です。初期設定はAutoです。
 - ③シャッターボタン フィルムカメラのシャッターをバルブ（B）に設定し、カメラのシャッターを押しながらSHOTを押すと、撮影できます。
 - ④カラーとモノクロの切り替えが可能です。
 - ⑤フィルムカメラのシャッターを押しっぱなしにすると、ここに画像が表示されます。
 - ⑥動画切り替えボタン
- ① Sensitivity change button + Allows you to change the sensitivity to positive. The default setting is Auto.
 - ② Sensitivity change button - Allows you to change sensitivity to minus. The default setting is Auto.
 - ③ Shutter button Set the shutter of the film camera to Bulb (B) and press SHOT while holding down the shutter of the camera to take a picture.
 - ④Color and monochrome can be switched.
 - ⑤When the shutter of a film camera is held down, the image is displayed here.
 - ⑥Video switching button

新機能

New feature

新機能：動画撮影画面

New: Video Shooting Screen

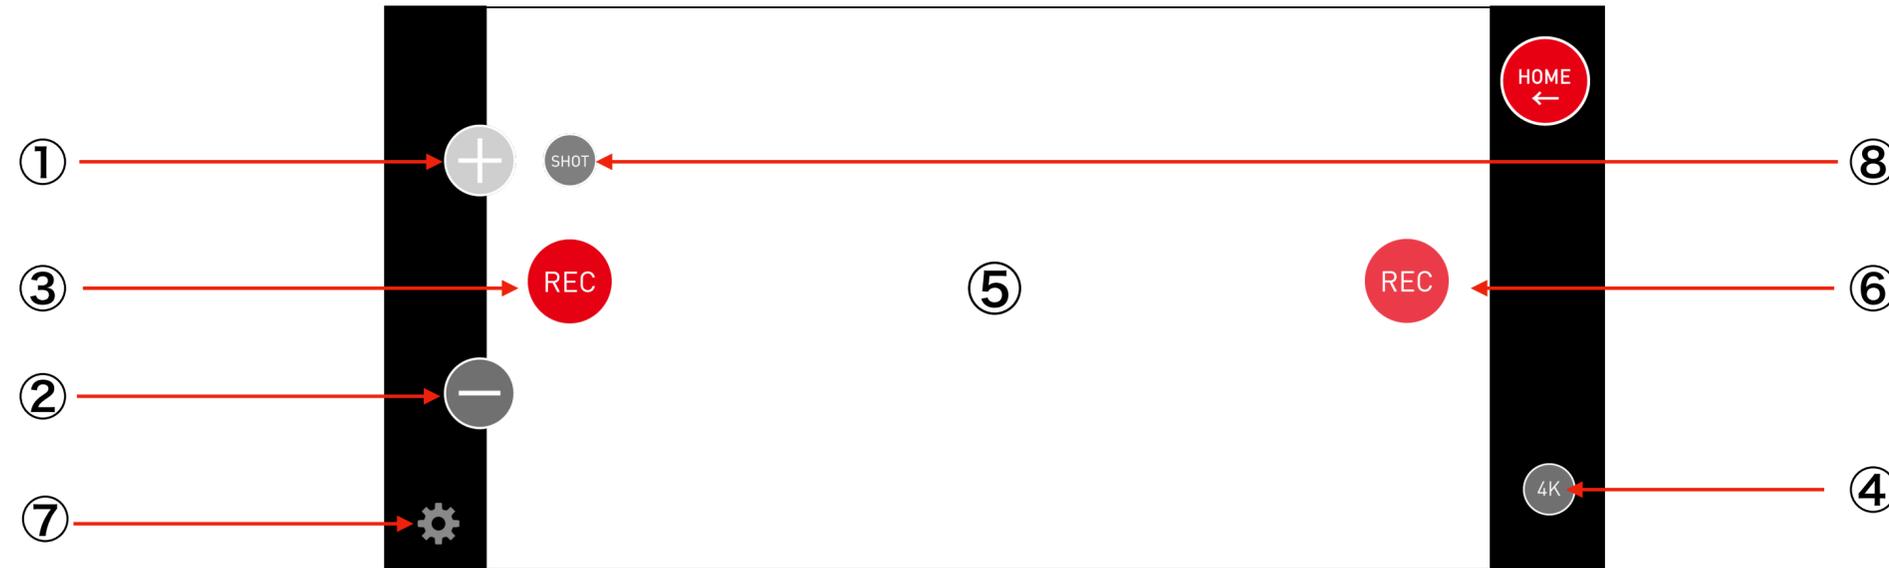

①感度変更ボタン+ 感度をプラスに変更可能です。初期設定はAutoです。

②感度変更ボタン- 感度をマイナスに変更可能です。初期設定はAutoです。

③録画ボタン フィルムカメラのシャッターをバルブ (B) に設定し、カメラのシャッターを押しながらRECを押すと、動画撮影できます。

④4K,HDの切り替えができます。

⑤フィルムカメラのシャッターを押しっぱなしにすると、ここに画像が表示されます。

⑥撮影中はRECが点滅します。

⑦FPSの設定はこちらから可能です。

⑧静止画撮影の切り替えボタン

① Sensitivity change button + Allows you to change the sensitivity to positive. The default setting is Auto.

② Sensitivity change button - Allows you to change sensitivity to minus. The default setting is Auto.

③ Recording Button Set the shutter of the film camera to Bulb (B) and press REC while holding down the shutter release button to record a movie.

④Switchable between 4K and HD.

⑤When the shutter of a film camera is held down, the image is displayed here.

⑥REC blinks during shooting.

⑦FPS settings can be made here.

⑧Switching between still image capture